


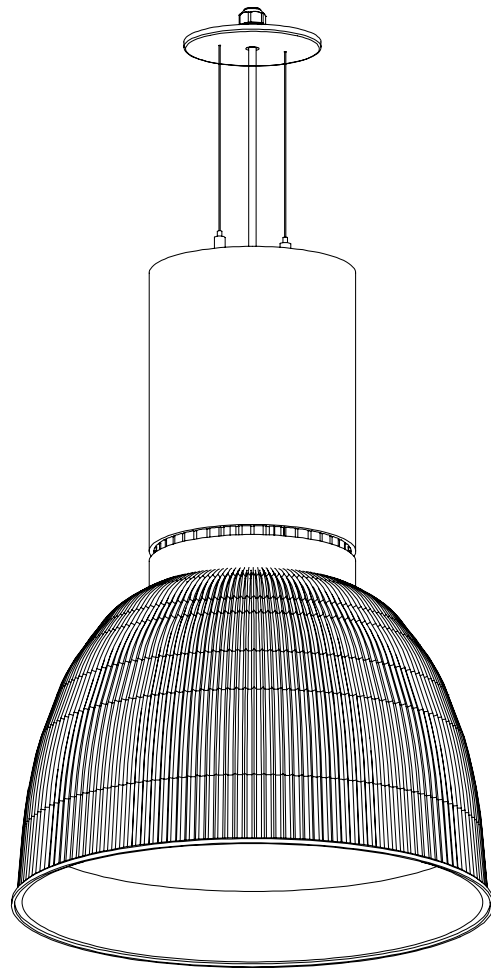

DCP9

Commercial LED Pendant



Safety Information

For your safety, read and understand these instructions completely before starting installation.

The electrical product contained herein is designed to meet the requirements of UL 1598 and the current NFP regulations as published in the NEC. Specific modifications and revisions in your area may differ from this standard. Compliance with local building and electrical codes must be confirmed before installation.

WARNING - To prevent wiring damage or abrasion, do not pinch or damage exposed wiring during installation. Keep away from edges of sheet metal or other sharp objects.

WARNING - Risk of fire or electric shock. Installation of this retrofit assembly requires a person familiar with the construction and operation of the luminaire's electrical system and the hazard involved. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING - Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features shown in the photographs and / or drawings. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

WARNING - Risk of fire or electric shock. Do not alter, relocate or remove wiring, lampholders, power supply, or any other electrical component.

Pre-Installation

Power to luminaire power must be turned off prior to installation. Failure to do so may cause electric shock, which may result in injury or death. Ensure that electrical connection is in accordance with local and NEC standards and that wiring is either 120VAC or 277VAC.

Cord Mount Installation

- 1 Thread two (2) aircraft cables (included) into bracket.
- 2 Attach Bracket to junction box with two (2) screws (not included). Rotate bracket to desired position.
- 3 Thread aircraft cable into canopy. Thread cable into cable grippers installed on pendant.
- 4 Attach magnetic cord holder to bracket with two (2) screws (included).
- 5 Tighten aircraft cables to take load off of cord.
- 6 Attach canopy to magnetic cord holder.

Stem Mount Installation

- 1 Thread stem into hole on top of pendant until secure.
- 2 Insert stem through canopy.
- 3 Thread aircraft cable into canopy. Thread cable into cable grippers installed on pendant.
- 4 Thread swivel ball onto stem until secure and tighten set screw to ensure it is locked into place.
- 5 Attach bracket to junction box with two (2) screws (not provided).
- 6 Screw bracket plate to bracket with two (2) screws (provided) to cover bracket opening.
- 7 Raise canopy onto junction box. Canopy will attach to bracket magnetically..